


viewmate^x

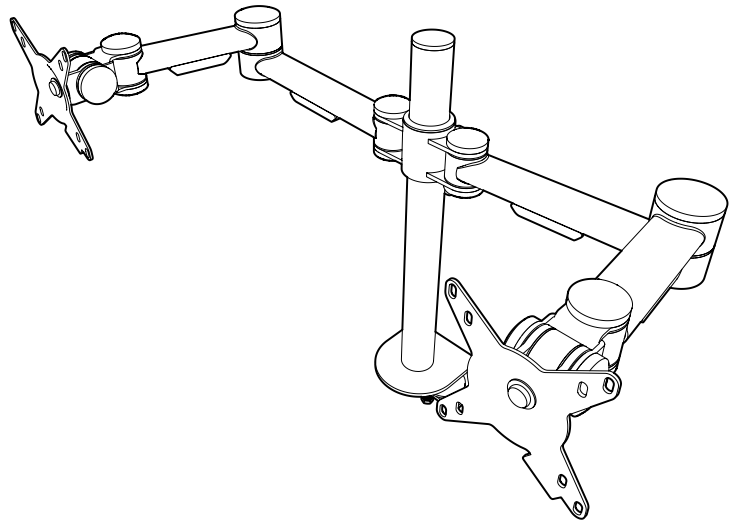


52.632

v1.2

Installation manual/Installatie handleiding
 Installations-handbuch/Manuel d'installation
 Manuale d'installazione/Manual de instalación
 Copyright ©2017 – Dataflex International BV


T +31 180 515444
 F +31 180 518540
 info@dataflex-int.com
 www.dataflex-int.com

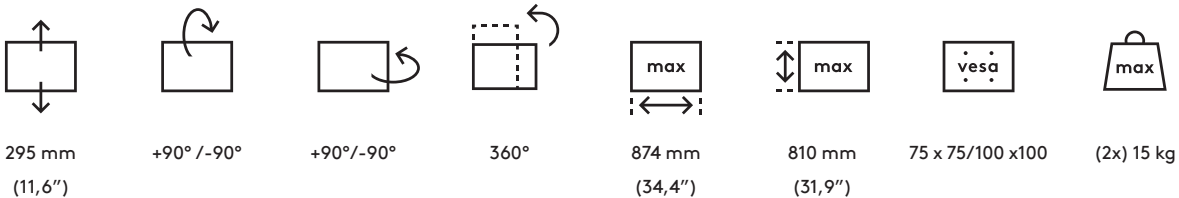













Parts/Onderdelen/Teile/Pièces/Parti/Partes

a 1x	b 1x	c 1x	d 1x	e 1x	f 1x	g 4x	h 4x	i 1x
j 1x	k 8x	l 2x	m 1x	n 1x	o 3 mm 1x			





viewmate^x

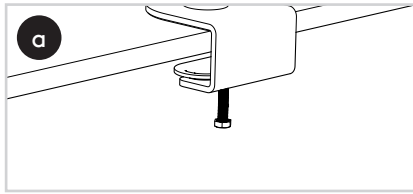

or/of/oder/ou/o

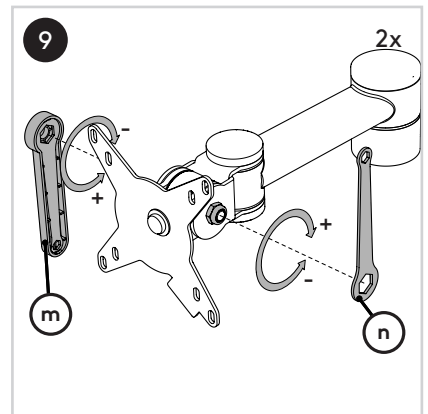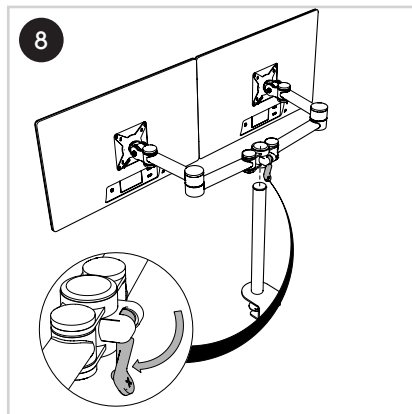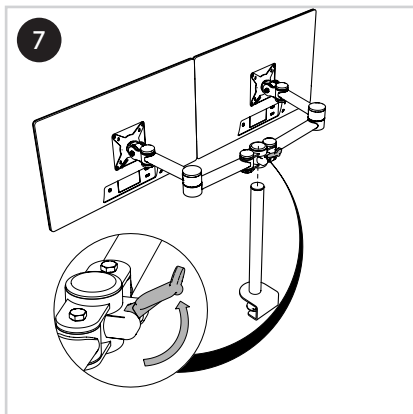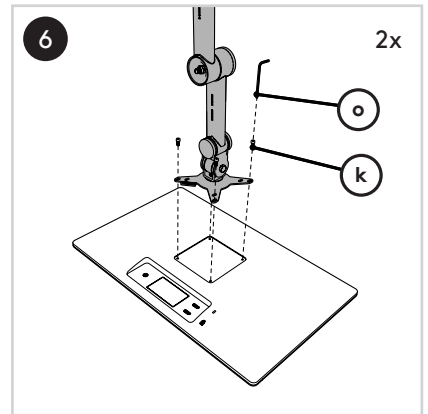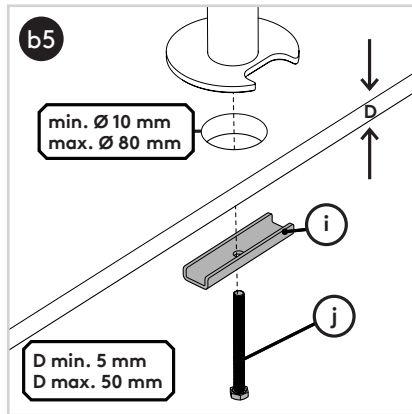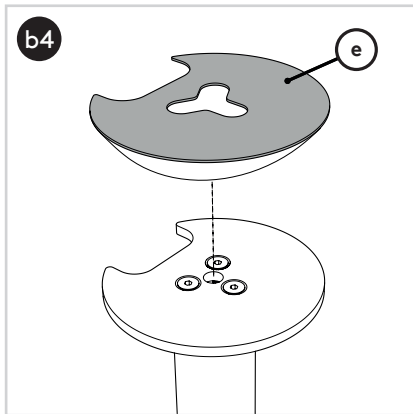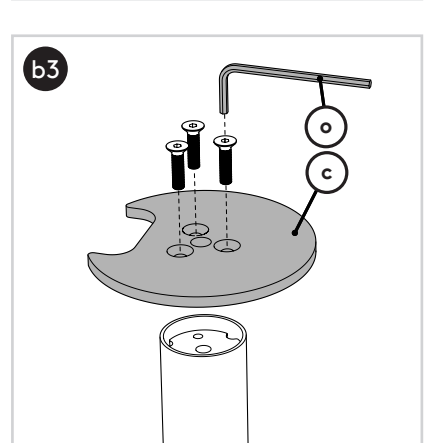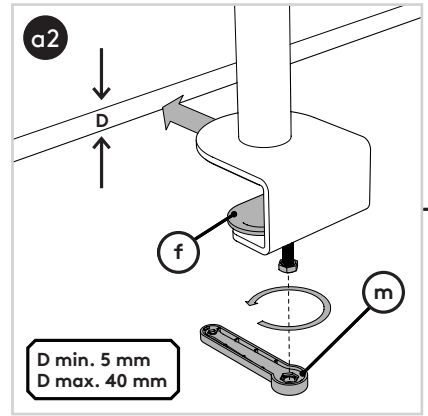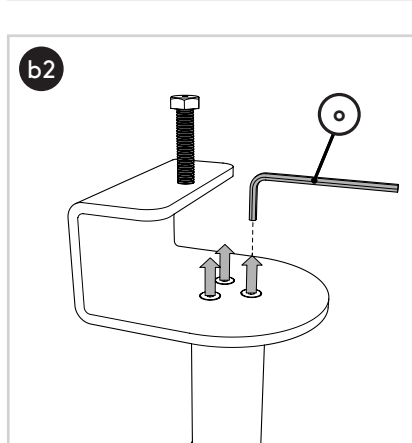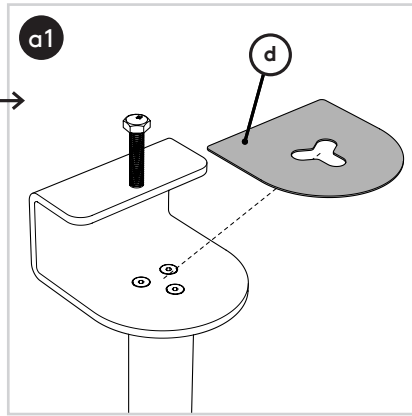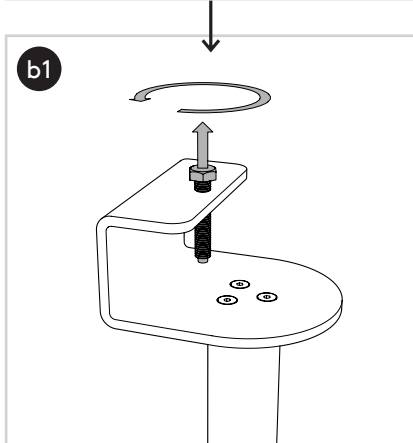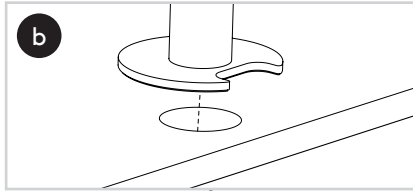

viewmate^x

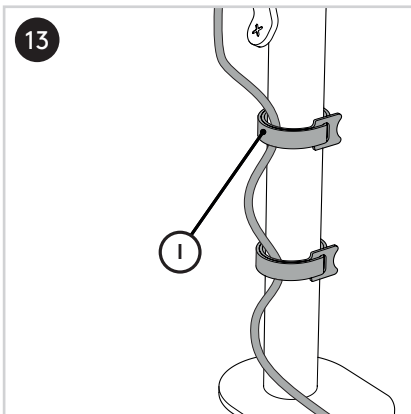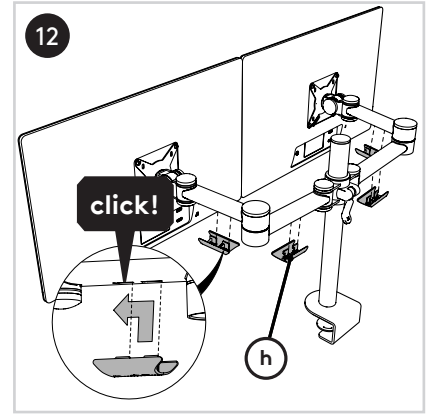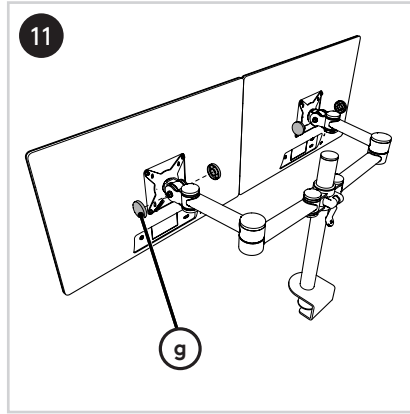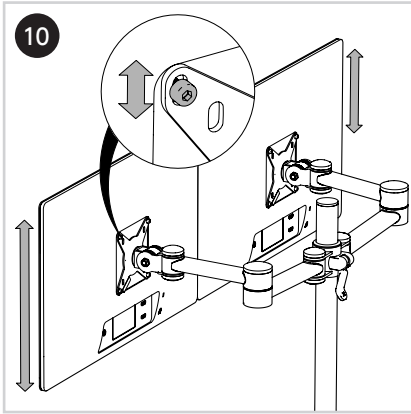

No rights can be derived from this publication/
Aan deze uitgave kunnen geen rechten worden
ontleend/Aus dieser Ausgabe können keine
Rechte abgeleitet werden/Aucun droit ne peut
découler de cette publication/Dal presente
documento non deriva alcun diritto/Del
contenido de esta publicación no podrá
derivarse ningún derecho