 


viewmaster^x

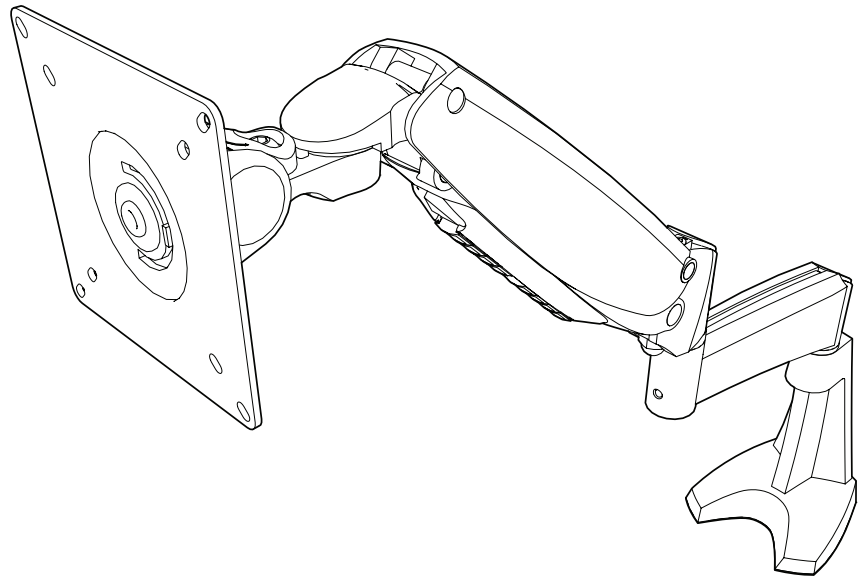

 
 
 
 
 
 

 
 

 
 

 







57.152

v1.4


Installation manual/Installatie handleiding
 Installations-handbuch/Manuel d'installation
 Manuale d'installazione/Manual de instalación
 Copyright ©2018 – Dataflex International BV

T +31 180 515444
 F +31 180 518540
 info@dataflex-int.com
 www.dataflex-int.com

     
Parts/Onderdelen/Teile/Pièces/Parti/Partes

 1x	 1x	 1x	 1x	 1x	 1x	 1x	 1x	 3x	
 1x	 1x	 2x	 2x	 2x	 2x	 2x	 1x	 2x	
 4x	 4x	 8x							












 
Required tools/Benodigd gereedschap/Benötigtes Werkzeug/Outils requis/Strumenti necessari/Herramientas necesarias

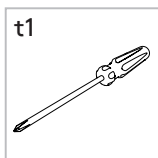













viewmaster^x



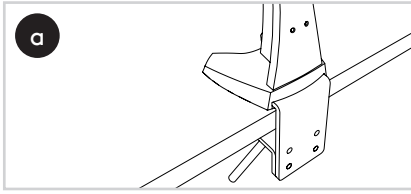 


or/of/oder/ou/o

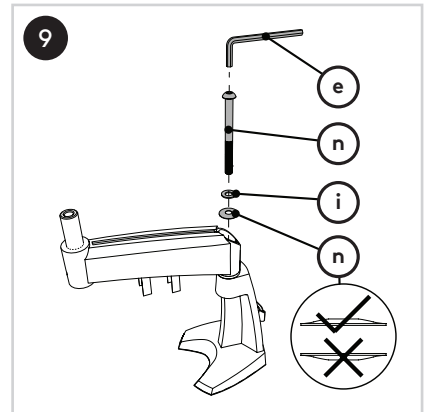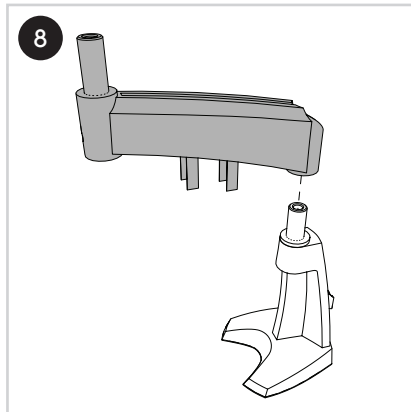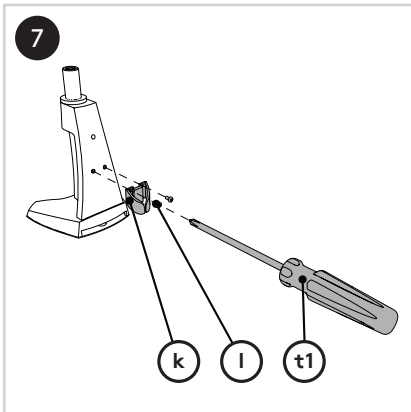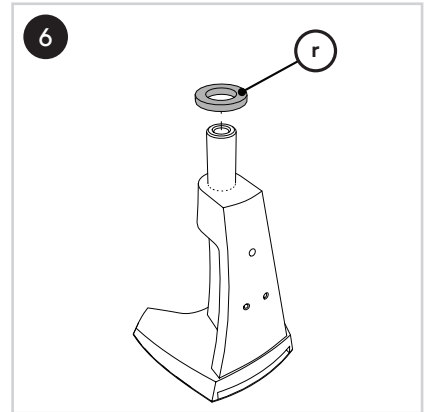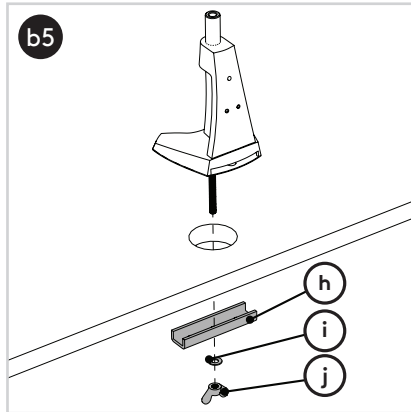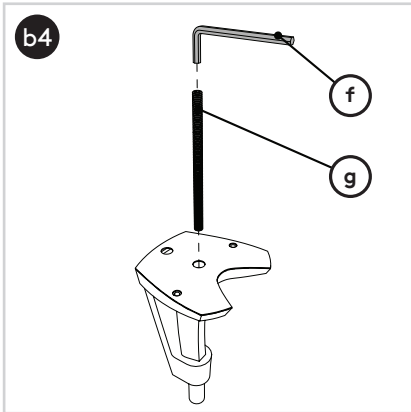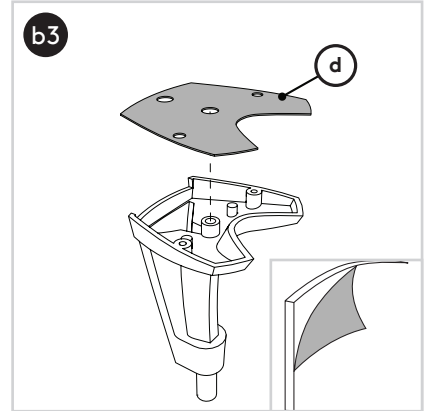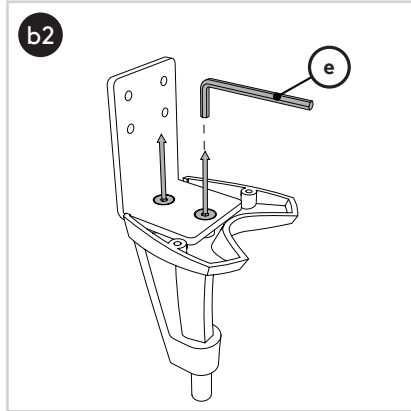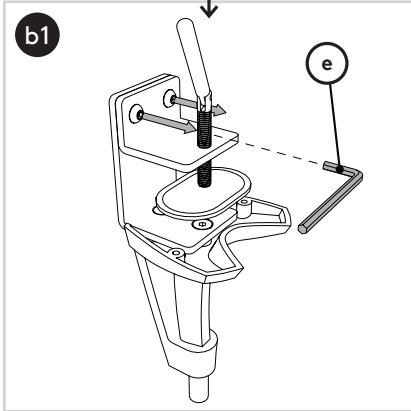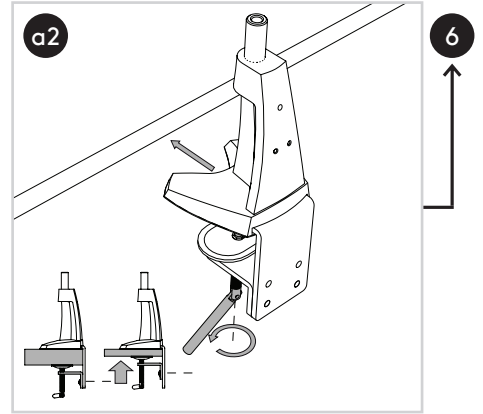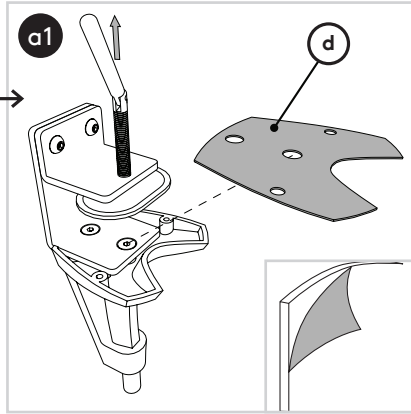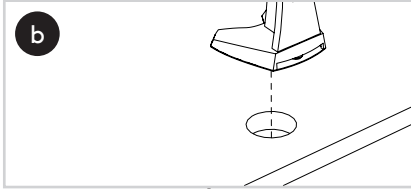            

viewmaster^x

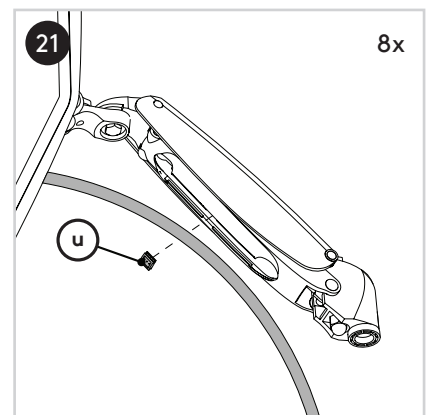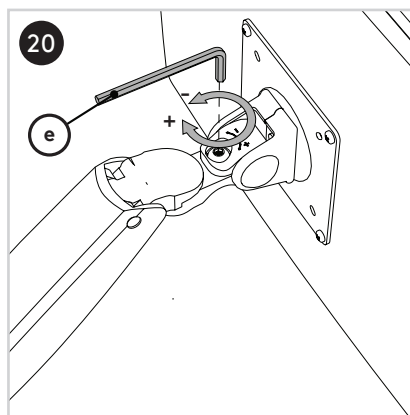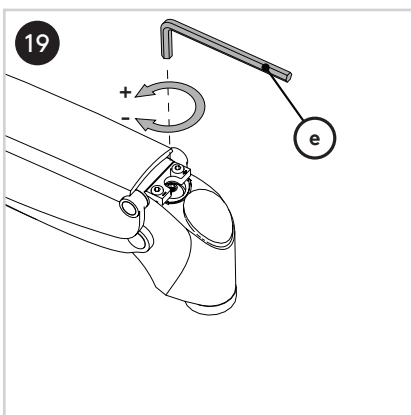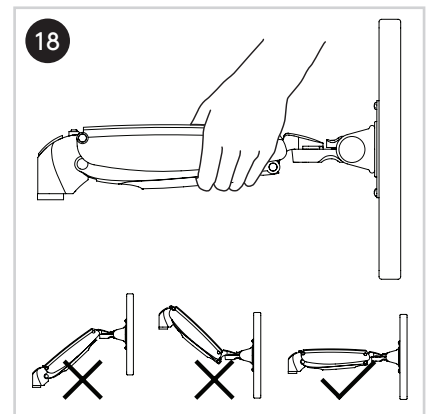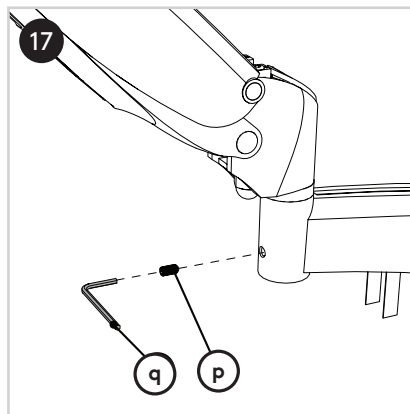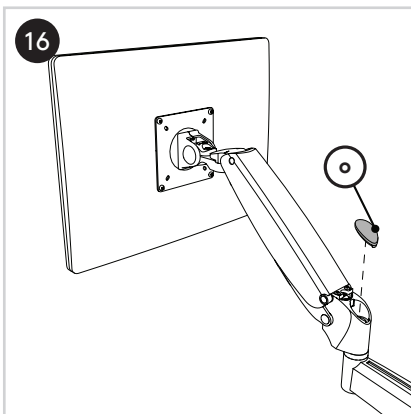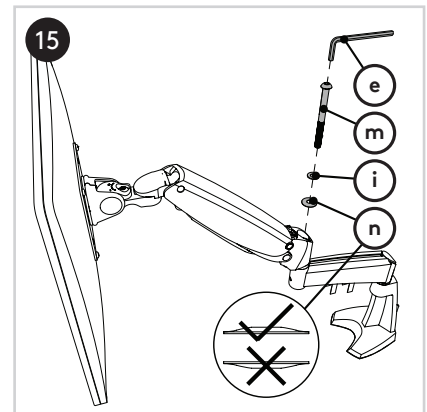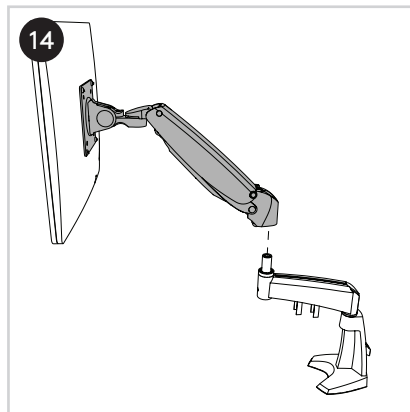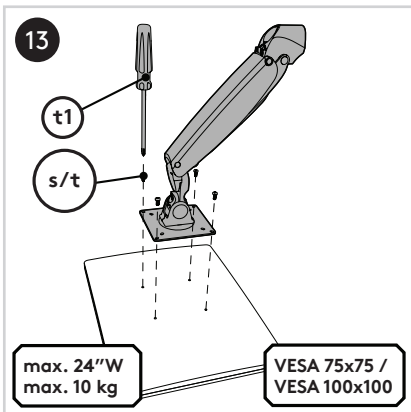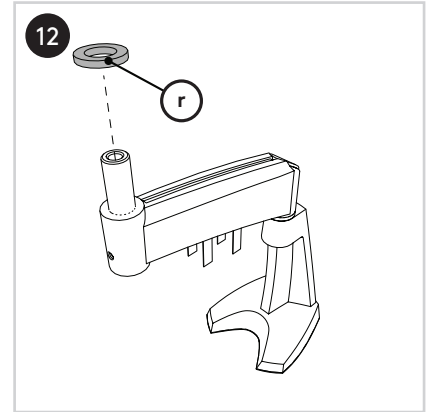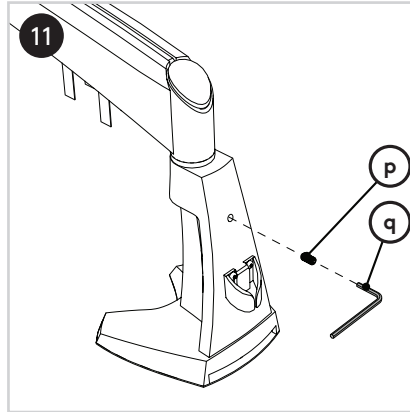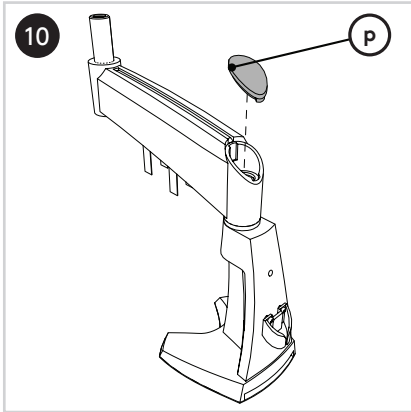            

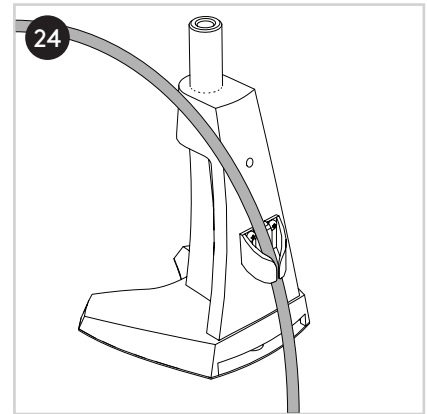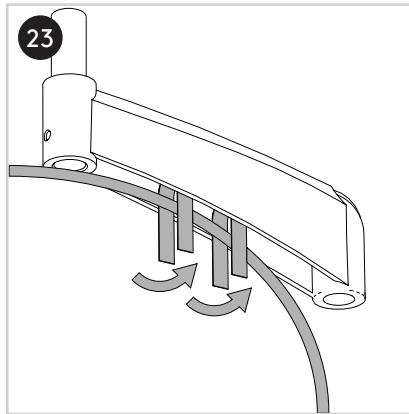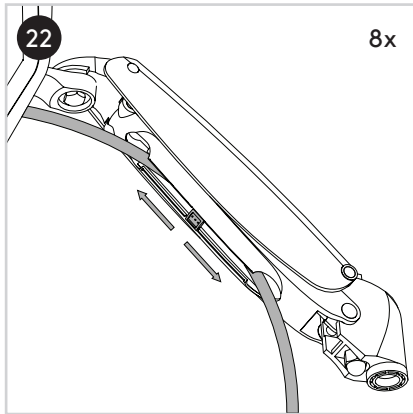   

No rights can be derived from this publication/
Aan deze uitgave kunnen geen rechten worden
ontleend/Aus dieser Ausgabe können keine
Rechte abgeleitet werden/Aucun droit ne peut
découler de cette publication/Dal presente
documento non deriva alcun diritto/Del
contenido de esta publicación no podrá
derivarse ningún derecho